


	/Partition work / plumbing work/ Floor repairing & tiles work activity.	charge		training, Tool box talk shall be taken before start the activity. Only experienced persons would be selected for the job
3	Assessment of the work area before job starting	Area Owner	Slip Trip Fall etc.	Assessment of the job area to ensure area must be cleaned for work.
4	Take all the hand tools and equipment's required for hot work at site	Approved Contractor	Trip hazard due to improper handling Equipment's and machines.	Ensure that the m/c machine are properly carried.
5	Start the required fabrication/ partition work/ Plumbing work/ Floor repairing Tiles work work process	Trained and experienced persons from contractor	As per attached hazards categories.	Ensure that all work must be done by train person.
6	Removal of scraped material after work completion.	Contract Employees	Cuts due to sharp edges of scrap material	Safety shoes, cotton hand gloves, safety helmets.
7	Closing of permit	Permit Executor and Contractor	Violation of permit	The permit should be handed over after getting it signed from Executor.
8	Assessment of the Hot work area after job completion	Area Owner	Smoldering, fire risk. Ensuring Area is cleared of Debris.	Assessment of the job area 1 hour after job completion to ensure that there is no smoldering and the area has been cleared of all debris

**E**

**Special Instructions/Note:**

1. Get the Permit to work along with height work permit from authorized person.
2. Follow all the work instructions strictly as per work permit.
3. The switch board used must have ELCB
4. No Cable joints in portable electric equipment is acceptable.
5. Close Supervision while performing the work.

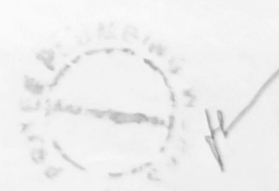

	/Partition work / plumbing work/ Floor repairing & tiles work activity.	charge		training, Tool box talk shall be taken before start the activity. Only experienced persons would be selected for the job
3	Assessment of the work area before job starting	Area Owner	Slip Trip Fall etc.	Assessment of the job area to ensure area must be cleaned for work.
4	Take all the hand tools and equipment's required for hot work at site	Approved Contractor	Trip hazard due to improper handling Equipment's and machines.	Ensure that the m/c machine are properly carried.
5	Start the required fabrication/ partition work/ Plumbing work/ Floor repairing Tiles work work process	Trained and experienced persons from contractor	As per attached hazards categories.	Ensure that all work must be done by train person.
6	Removal of scraped material after work completion.	Contract Employees	Cuts due to sharp edges of scrap material	Safety shoes, cotton hand gloves, safety helmets.
7	Closing of permit	Permit Executor and Contractor	Violation of permit	The permit should be handed over after getting it signed from Executor.
8	Assessment of the Hot work area after job completion	Area Owner	Smoldering, fire risk. Ensuring Area is cleared of Debris.	Assessment of the job area 1 hour after job completion to ensure that there is no smoldering and the area has been cleared of all debris

**E**

**Special Instructions/Note:**

1. Get the Permit to work along with height work permit from authorized person.
2. Follow all the work instructions strictly as per work permit.
3. The switch board used must have ELCB
4. No Cable joints in portable electric equipment is acceptable.
5. Close Supervision while performing the work.

